

Purpose

The Purpose of this document is to explain to the reader how to replace a Capper assembly on a HERO Archimede Dispenser.

Scope

Archimede Colorant Dispenser models A2XX / A3XX

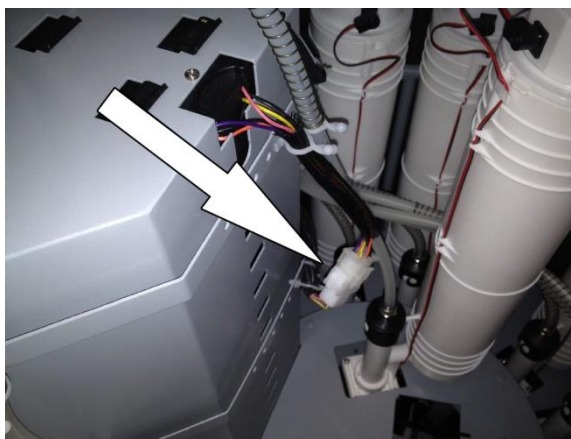
Safety

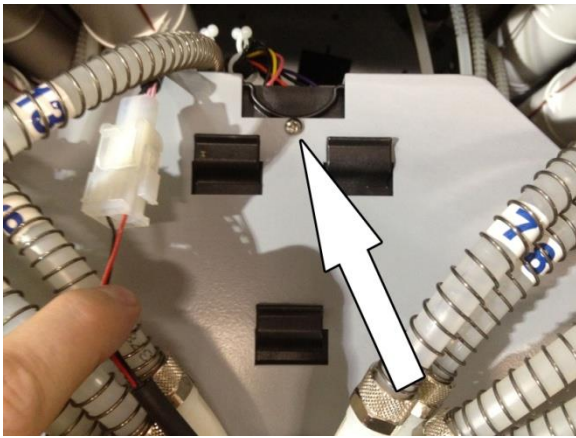
- Please follow all standard safety precautions while working on any equipment.

Tools and materials required

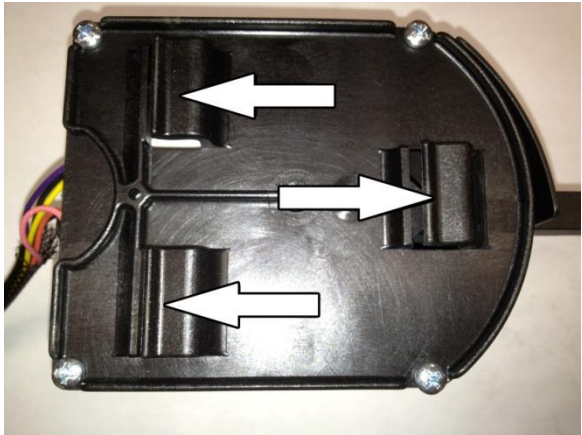
- Philips screw driver.
- Snips

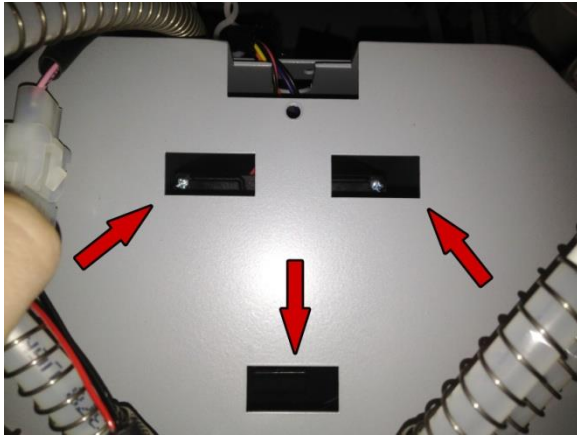
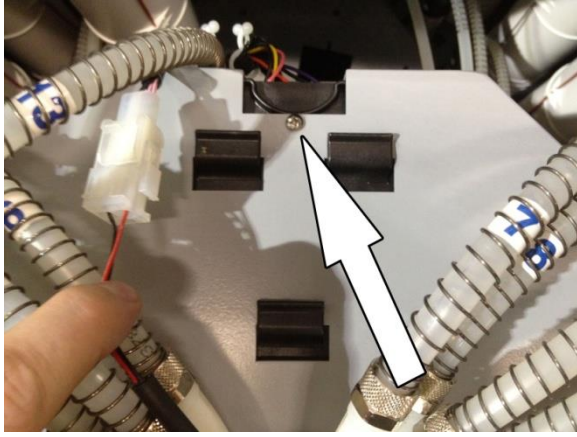
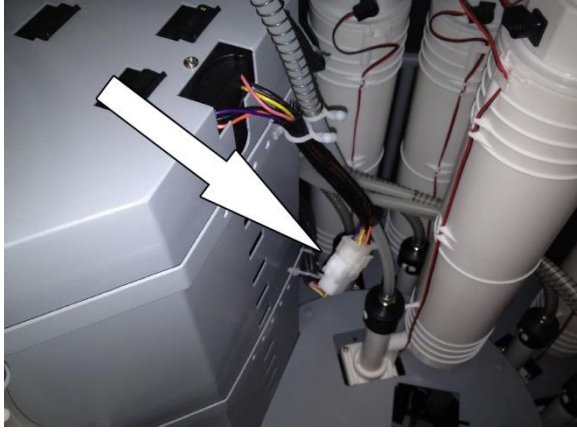
1 Removal

Step	Instruction	Image
1.1	Turn off the power switch then unplug power cable from dispenser.	
1.2	Remove the sponge cup from the Capper arm.	
1.3	Locate and unplug the connector pictured. <u>Do not tug on the wires, only pull on the connector.</u> It may be necessary to cut one (or more) zip straps with a pair of snips or scissors to free the wires from the frame.	

1.4	Locate and remove the Philips (star) screw pictured.	
1.5	Grasp the Auto Cap assembly unit firmly with both hands and pull gently toward you. The assembly should easily slide out allowing you to remove it.	
1.6	Please see SECTION 3 (Enabling and Disabling Capper within TintWise) if you need to disable your Capper. If you need to install a new Auto Capper proceed to SECTION 2 "Installation" .	

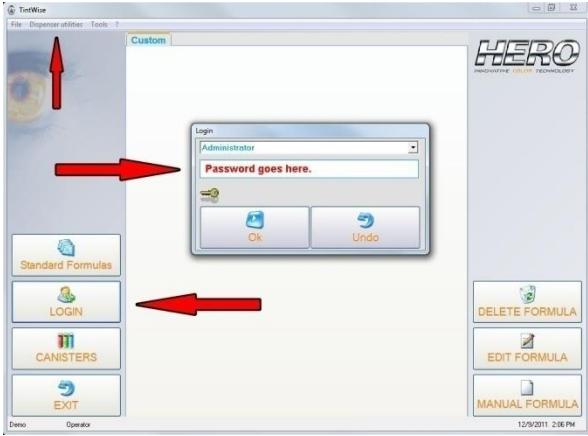
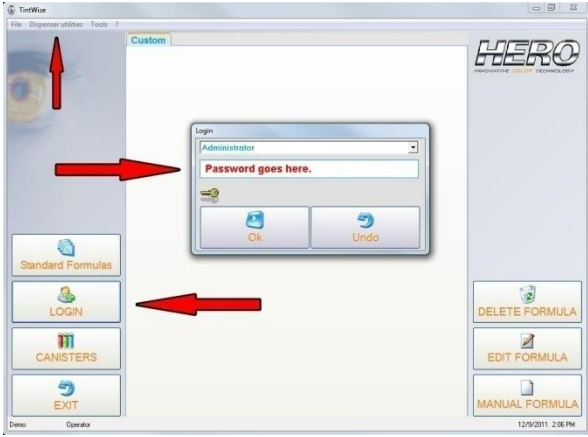
2 Installation

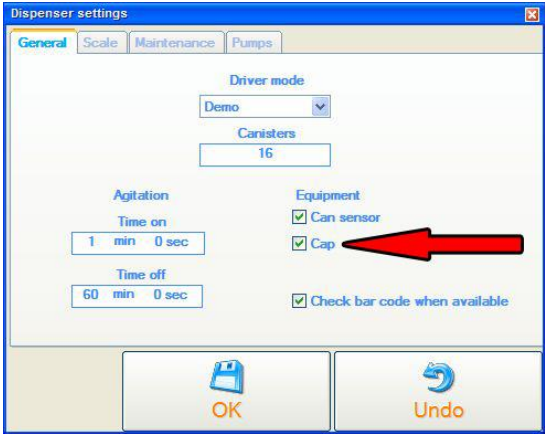
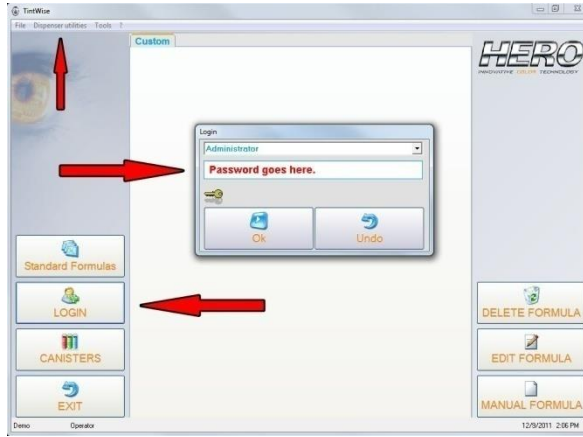
Step	Instruction	Image
2.1	Visually inspect your new Auto Cap for any obvious signs of shipping damage.	
2.2	Put the new Auto Cap assembly into your dispenser being sure to run the wires through the same hole the old ones came out of. See the three tabs pictured to the right.	

2.3	<p>Make sure the three tabs align and fit into the three corresponding holes pictured to the right. Insert the three tabs into their correct holes and push the Capper firmly toward the back of the dispenser until the tabs lock into place.</p>	
2.4	<p>Confirm once more that all three tabs are properly seated within their slots. If they are not seated correctly or if a tab is not in a slot the Capper will sit in an incorrect position leading to nozzle clogging issues.</p>	
2.5	<p>Put the Philips (star) screw back into place.</p>	
2.6	<p>Reconnect the Capper wiring connector to the main harness.</p>	
2.7	<p>Replace Sponge cup.</p>	
2.8	<p>Reconnect power cord to rear of dispenser.</p>	

2.9	Turn power back on and test dispenser.	
2.10	Please see SECTION 3 (Enabling and Disabling Copper within TintWise) if you need to enable your copper.	

3 Enabling and Disabling Copper within TintWise

Step	Instruction	Image
3.1	Open TintWise® if you have not already done so.	
3.2	Click on “Login” on the left-hand side of the screen as shown. Choose “Administrator” from the dropdown menu then click “OK”.	
3.3	On the top left of your TintWise window look for the words “Dispenser utilities” and click on them.	

3.4	Click on “Dispenser Settings”. A new window will open that looks like the image to the right.	
3.5	Depending on your need you can now either enable (checked) or disable (unchecked) the Copper by applying or removing the check mark beside the word “Cap” towards the middle right of the window.	
3.6	Press OK once you’ve made your changes and then click “Logout” on the left-hand side of the TintWise® home screen.	