

Purpose—

To show the process of a replacing an agitation motor.

Scope

Eureka Dispensers.

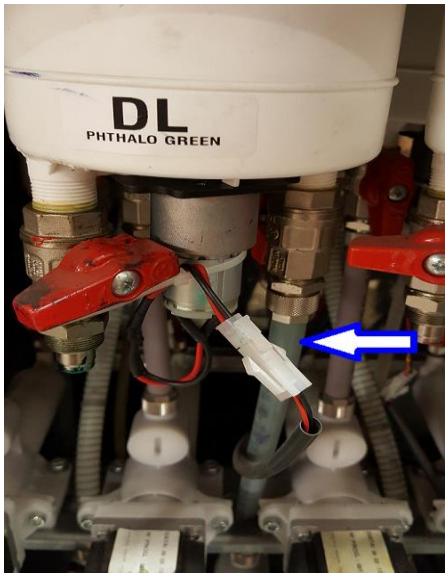
Safety

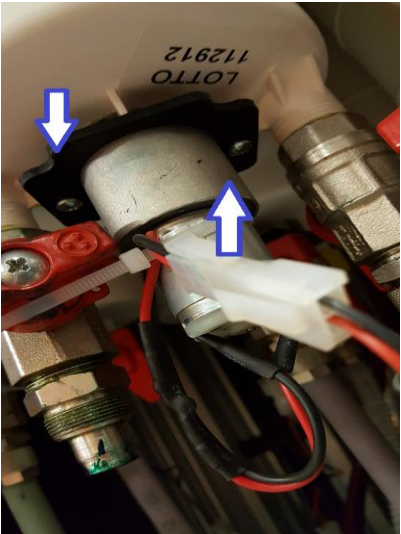
Follow all standard safety practices when working on any equipment.

Tools and materials required

- 4mm hex key.
- Philips Screw Driver.

1 Removal and Installation

Step	Instruction	Image
1.1	Open the rear panel of the dispenser by removing the required 4mm hex bolts.	
1.2	Locate the canister(s) which require service.	
1.3	Disconnect the wiring harness for the agitation motor.	

1.4	<p>Remove the two screws that hold the agitation motor in place.</p> <p>Take care not to drop these screws.</p>	
1.5	<p>Remove the motor and replace by reversing instructions.</p>	